





# Performance Products Precision Bearing Packer User Instructions



1. Place bearing packer in standard bench vise. Install grease cartridge and bleed grease gun. (Instructions included separately.)

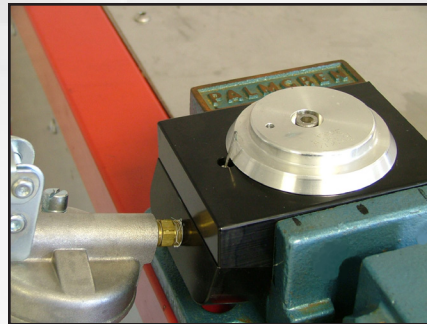

2. Install appropriate bearing seat onto the packer base. Bearing seat is aligned with a locating dowel.

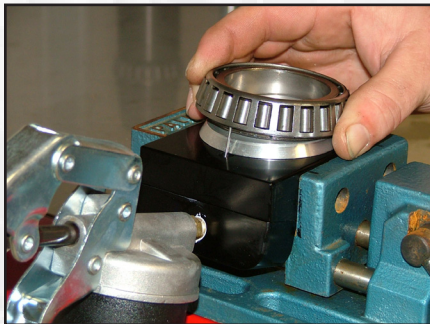

3. Place the bearing onto the bearing seat allowing the needle to locate in between two of the bearing rollers.



4. Carefully squeeze the grease gun handle while watching the top of the bearing. Stop when you see grease reach the top of the bearing roller.



5. Lift the bearing slightly and rotate to the next set of rollers\*. Repeat process until entire bearing is packed.

#### Tips:

- \*In applications using bearings spacers and quality bearings, only pack every other roller or approximately 50% full.
- If grease pushes out of the bearing bottom before the bearing top, the needle is not properly located between the rollers.
- No grease will be visible on the outside of the bearing.
- Replacement needles and custom bearing seats are available.
- If the proper bearing seat is not available, simply hold the bearing with the needle 1/8" in the bearing and fill.

For Technical Information Call: 888-399-6074.

©2014 DRP Performance Products, Inc.

**DRP Performance Products, Inc. 888-399-6074 DRPperformance.com**

*"...let us run with endurance the race that is set before us..." Hebrews 12:1*